Field Analyst for Gate


Now all automatic



Tel.:34263882 email: idexhk@wheretowet.com

Field Analyst for Gate

- Install at convenient positions without creating disturbance.
- Max 3 cameras for wide Entrances / Exits or multigates
- More useful information gathered

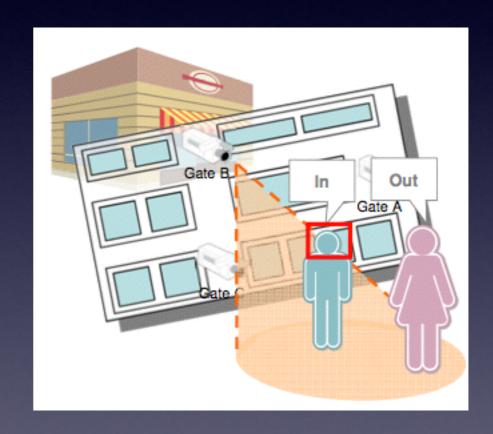



- Automatically detects
 - Gender
 - Age range
 - Date / Time of appearance
 - Location of appearance (when more than one camera used)
 - Time spent at the defined area
- Self defined area inside the area for more accuracy counting



- More meaningful information gathered
- Tailored configuration for unique purpose
- Maximum use for marketing / future business planning / campaign planning
- Tailored reports for unique use is possible (basic reports included)

Recommended Specifications (for version 4.0)

	Estimation PC (1 camera)	Estimation PC (2 or 3 camera)
Specs	CPU: Core™ 2 Quad Q9550(2.83GHz) Memory: 2 GB	CPU: Core™ i 7 S860(2.53GHz) Memory: 2.5 GB
os	Windows 7 Professional SP1 32bit Windows 7 Professional SP1 64bit	Windows 7 Professional SP1 32bit Windows 7 Professional SP1 64bit
Remarks	- IP camera - USB camera - Analog camera - Coaxial cable or LAN cable is required	- IP camera - USB camera - Analog camera - Coaxial cable or LAN cable is required

^{*} Set up your system so that images can be imported from the cameras to the PCs. Refer to the instruction manuals provided with your capture boards and video cameras to set up such configuration.



email: idexhk@wheretowet.com

^{* 3} sets of cameras at maximum can be connected.